


Effective Immediately in NC - CLEANOUTS

Per the NC Department of Insurance and the NC Board of Licensing ICC Code Interpretation, it is no longer permissible to use any type of insert fitting as a cleanout access point under any circumstance. Also, PVC pipe and fittings of any kind are not considered traffic-rated materials and cannot be stubbed up in a concrete driveway or sidewalk area without a NC approved (traffic-rated) access box with cover around the PVC riser pipe.






A *traffic rated* concrete box OR cast iron mini-manhole (with cover) provided by builder or concrete supplier

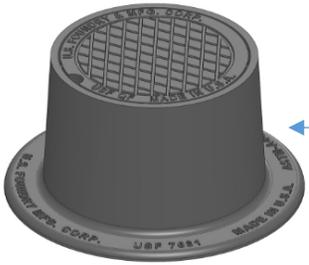

US Foundry 7631

ALL Crews - Effective Immediately within NC:

May use either setup within the flower bed area

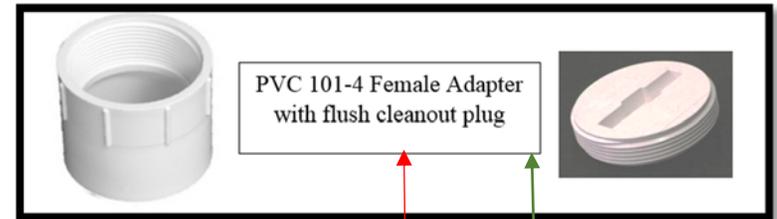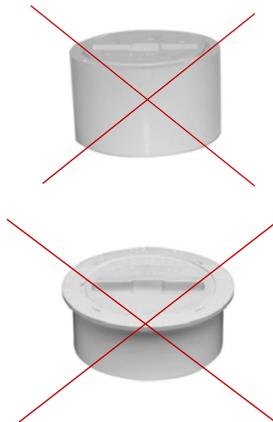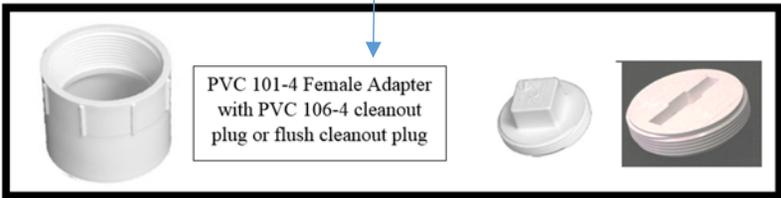

Must use above setup any grassy area

Must use above setup **INSIDE** of a NC approved access feature  or  if in concrete!!!

Leave the cleanout fittings **UNGLUED** at time of W&S installation (to be lowered and glued in place after finish grade).

If any cleanout will be located within the concrete driveway or sidewalk area, then a NC approved access feature **MUST** be installed around the pipe (such as a traffic-rated concrete meter box or heavy duty cast iron mini-manhole with cover as shown at the top). Under no circumstance may an insert type fitting of any kind be installed in NC (snap-in or "chevy" cleanout cap) - even if concrete is poured.